


TWO METER 300 OHM TWINLEAD J-POLE ANTENNA

Bill Miller, K1IBR August 2003

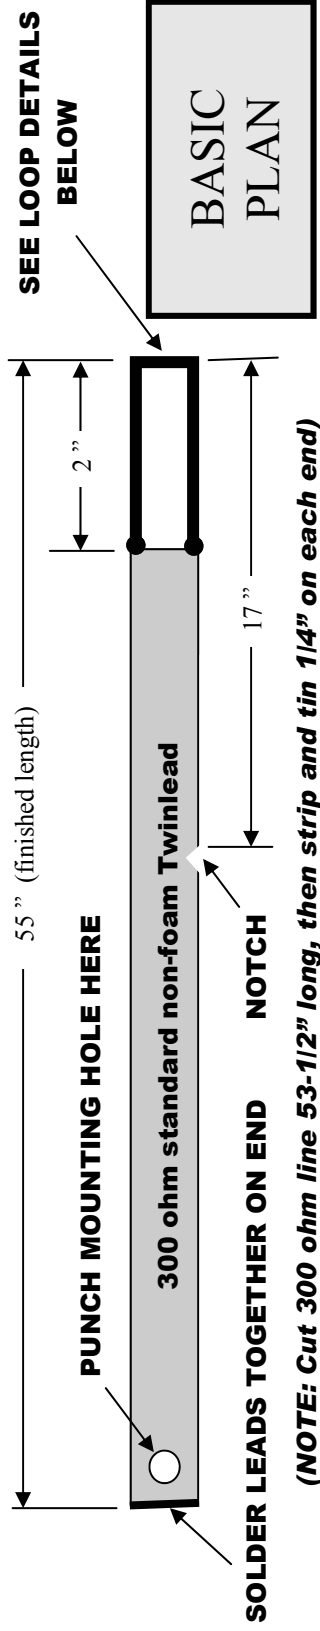

ASSEMBLE LOOP AND COAX FIRST, AND SOLDER TO 300 OHM LINE. THEN NOTCH THE 300 OHM LINE.
CENTER A 5" PIECE OF HEAT SHRINK TUBING OVER THE MATCHING LOOP

